

# Repair, Renovate, Revive Furniture Kit

- Complete kit for furniture repair around the home
- An ideal starter pack for beginners
- Helps you achieve professional and hardwearing finishes quickly
- Full instruction leaflet included
- Easy to use



**Starter kit for common repairs.**

## Purpose

Liberon Repair, Renovate and Revive Furniture Kit contains all you need to repair, renovate and revive small surface damage to the woodwork and furniture in your home. The kit enables you to remove white ring marks, built-up wax and spray polishes and to fill nail holes and deep scratches as well as removing superficial scratches from polished or varnished surfaces.

## How to use

Removal of white marks caused by heat or water

On surfaces that are only waxed, simply clean the surfaces with Wax and Polish Remover and Ultra Fine Steel Wool (0000). Once clean the surface can be re-waxed with Black Bison Fine Paste Wax.

On hard surface finishes such as French polishes, lacquers and varnishes the Ring Remover will easily and effectively remove the white marks. Apply using a clean, lint-free cotton cloth and rub vigorously in a circular motion over the mark until it is removed. Buff with a clean, dry cotton cloth and wax or polish as normal.

## How to disguise or remove superficial surface scratches

Many hard finishes such as French polishes or lacquers are prone to superficial scratches, which only show in a certain light. These can be either disguised or completely removed by waxing the surfaces with Black Bison Fine Paste Wax applied with Ultra Fine Steel Wool (0000), working with the grain of the wood. Allow to dry for 20 minutes, or until touch dry, and then buff with a clean cotton cloth or furniture brush, again working with the grain of the wood.

## Filling nail holes, deep scratches, cracks and splits in wood

Many holes and scratches can be filled using Liberon Retouch Crayons. Simply rub the crayon across and along the hole until it is filled, then buff off the excess wax with a clean cotton cloth.

## How to remove finger marks from the wood

Furniture that has had many years of spray polishing may become sticky and prone to finger marking. To remove the sticky polish and finger marks simply clean the surface with Wax and Polish Remover and Ultra Fine Steel Wool (0000). Work with the grain of the wood and wipe dry. If necessary repeat the process. Once the surface is clean it can then be waxed using Black Bison Paste Wax in clear.

## Important

Always test products on a spare surface or inconspicuous area for colour, compatibility and end results.

## Pack size

- 150 ml Furniture Wax
- 250 ml Wax and Polish Remover
- 125 ml Ring Remover
- 4 x 7g Ultra Fine Steel Wool (0000)
- Retouch Crayons (mixed)

This product should be used in accordance with the manufacturer's instructions. Recommendations are for guidance only since conditions of use are completely beyond our control. For technical or practical information on this or other Liberon products please contact Liberon Technical Services on 01797 367555.

Liberon Limited, Mountfield Industrial Estate, New Romney, Kent TN28 8XU.

Tel: 01797 367555 Fax: 01797 367575 [www.liberon.co.uk](http://www.liberon.co.uk). Liberon Ltd is a V33 Group Company